


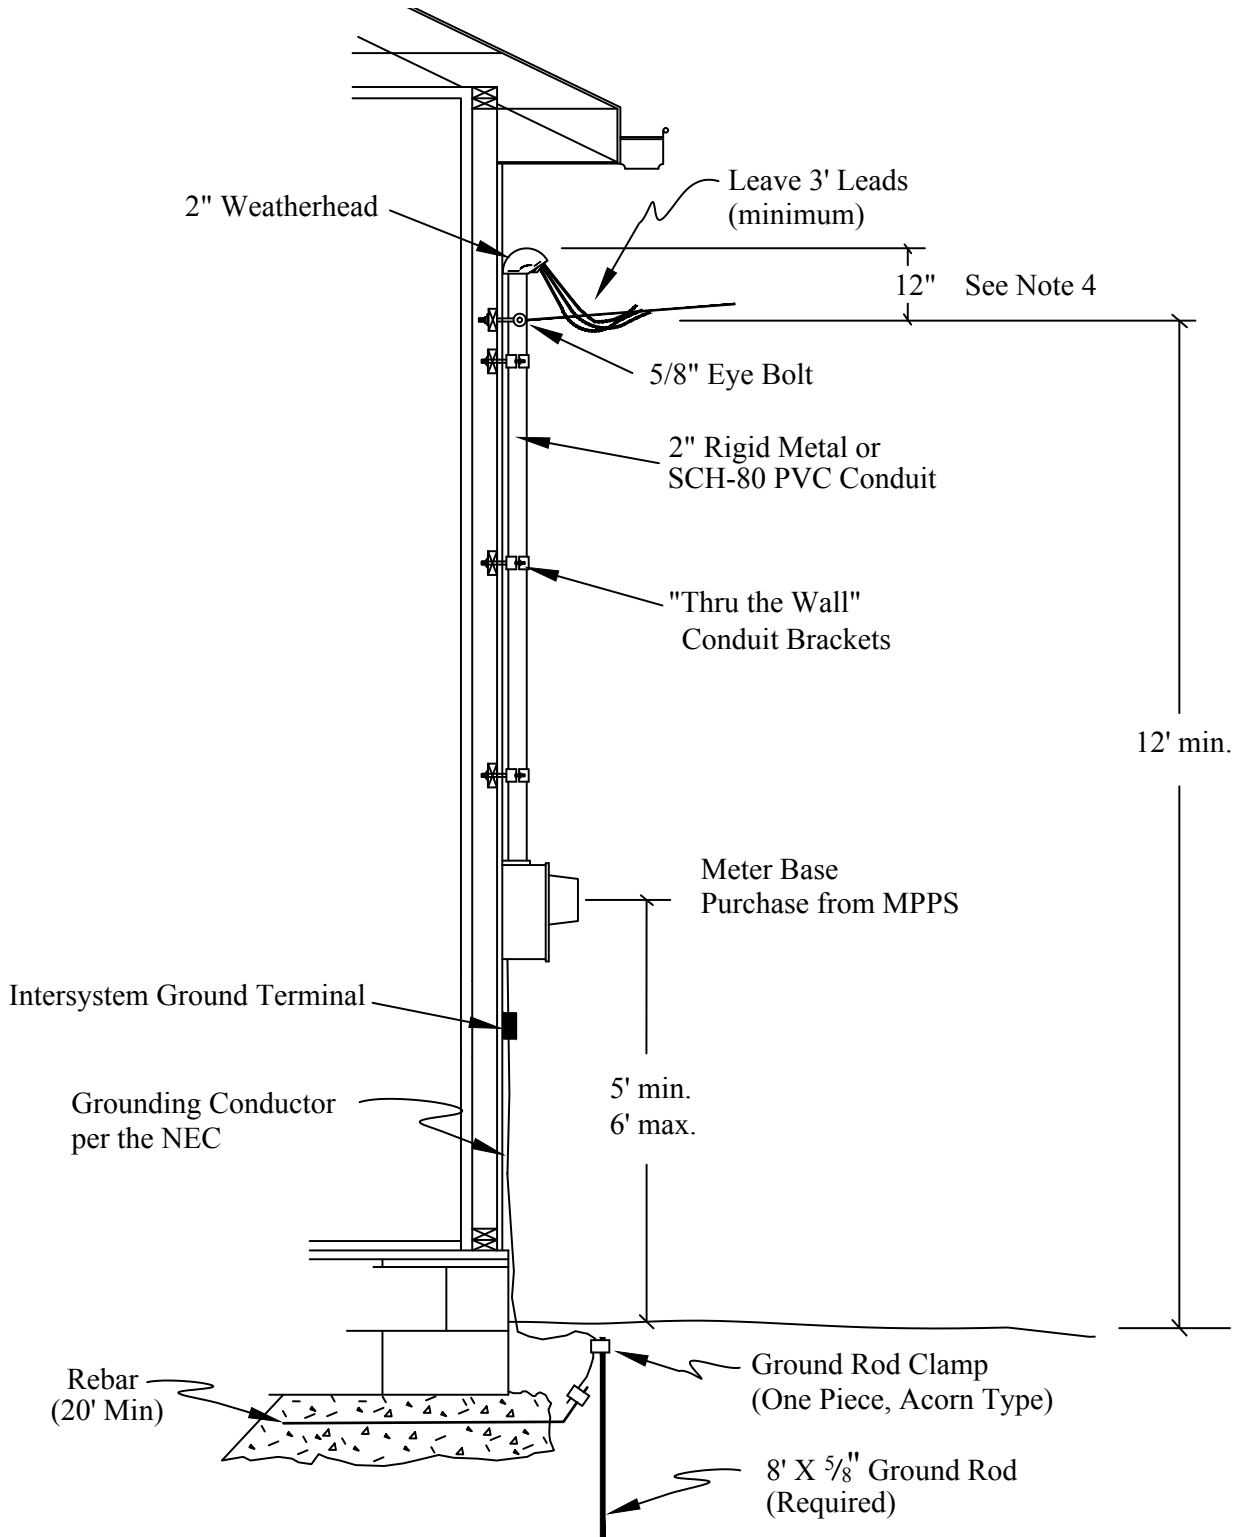

Typical 200 AMP Overhead Service Diagram with Attachment Below Roof



NOTES:

1. Meter locations must be approved by MPPS prior to installation.
2. All conductors are to be sized and installed according to the NEC.
3. Ground rod, foundation, & metal facilities shall be grounded according to the NEC.
4. Install 5/8" eye bolt 12" below weatherhead.