


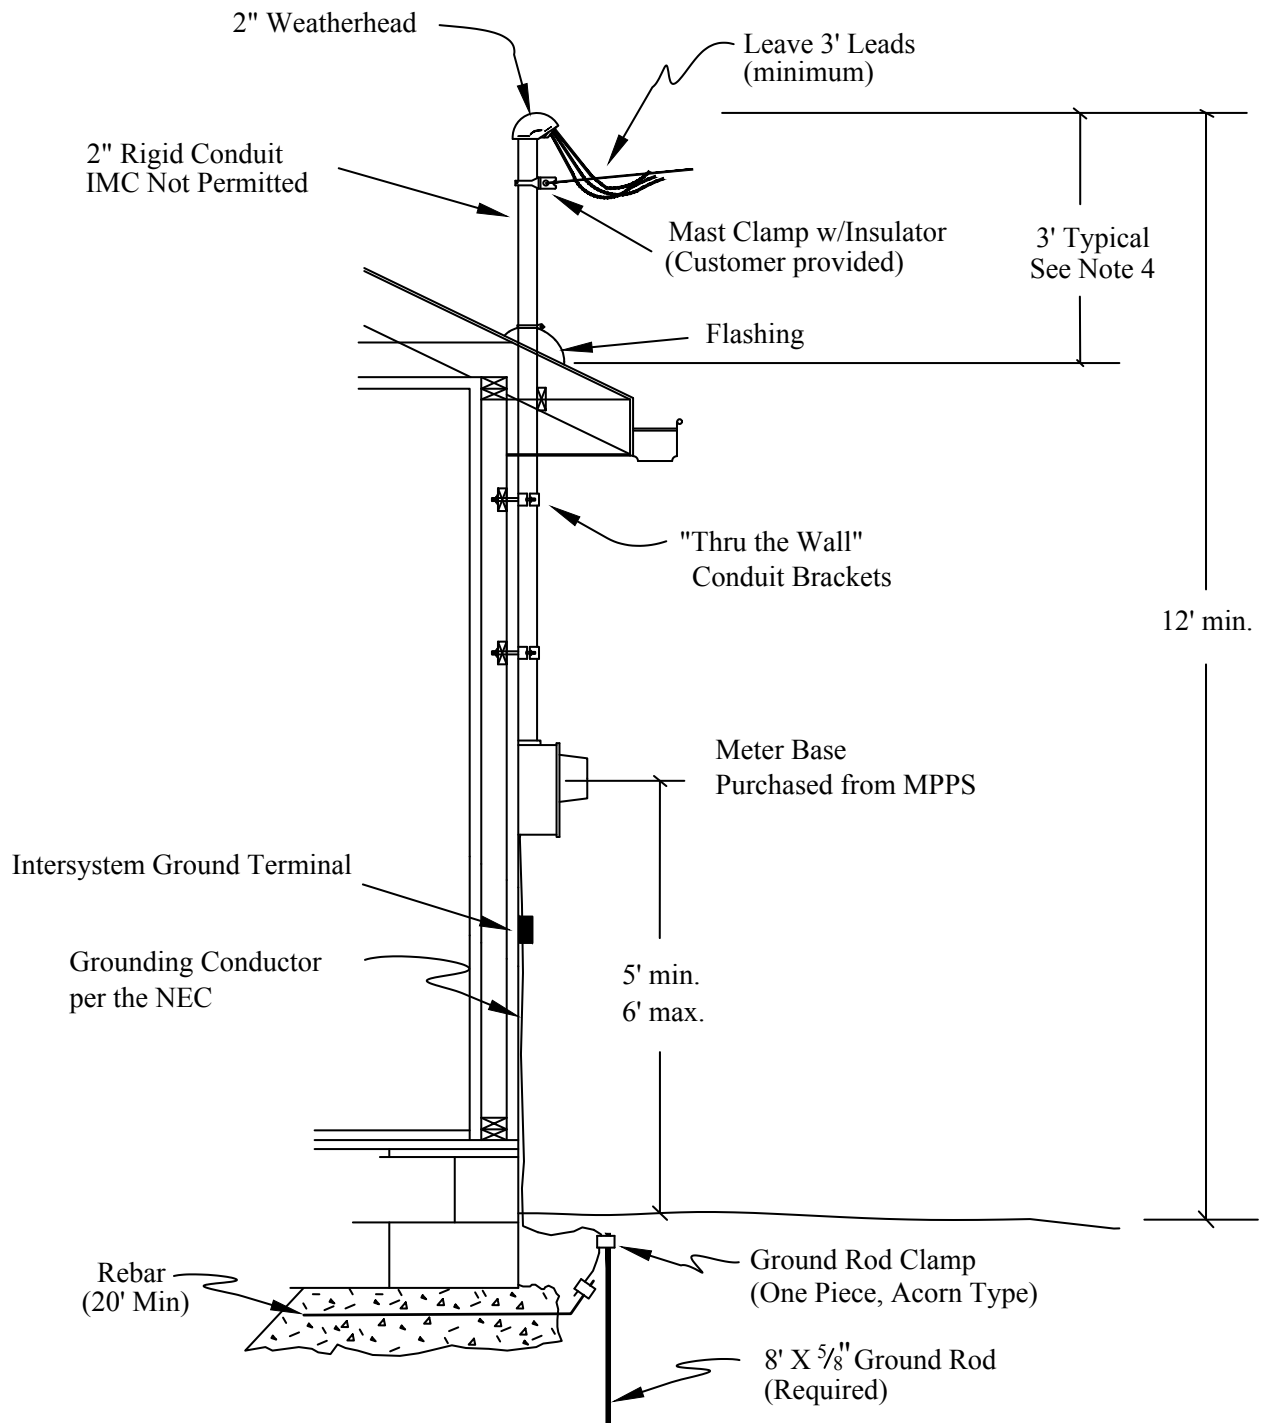

Typical 200 AMP Overhead Service Diagram with Attachment Above Roof



NOTES:

1. Meter locations must be approved by MPPPS prior to installation.
2. All conductors are to be sized and installed according to the NEC.
3. Ground rod, foundation, & metal facilities shall be grounded according to the NEC.
4. For weatherheads over 3' above roof, a guy supporting the mast shall be installed.